

# Detaching the Loader from the Tractor



1). Place Bucket Leading edge on the ground and position point 'A' 20cm to 30cm from the ground.



2). Lower and adjust Support Legs to touch the ground.



3). Move the safety Lock Pin from the Green position.



4). Lock the Safety Lock Pin in the Red position.



5). Release the Hand Brake. Crowd the Joystick back until the Loader detaches from the Tractor.



6). Engage the Hand Brake and Switch the Engine Off. Release the Hydraulic pressure from the Valve.



7). Disconnect the Hydraulic Quick Release Valve and Third Service Plug.



8). The Loader is now completely detached from Frame and the Tractor is ready to be driven away.

# Attaching the Loader to the Tractor



9). Position Tractor in the Centre of the Loader.



10). Connect the Hydraulic Quick Release Valve and Third Service Plug.



11). Place the Safety Lock Pin in the Central Position.



12). Release the Hand Brake. Crowd the Joystick Forward until the Loader Drops into place and the Safety Lock Pins click into Position.



13). Check the Safety Lock Pin has dropped into the Green Position.



14). Ensure the Safety Lock Pin is Locked in the Green Position.



15). Raise the Loader to clear the Support Legs from the ground and Stow the Support Legs away.



16). The Loader is now Safely Attached and ready for use.